


### 3.2 Command line interface

The command line interface (CLI) is RS-232 interface with an RJ-45 Mechanical connector. The pin-out numbering is shown in Table 3-3.

PIN	Signal	Direction M5112-terminal	MDI signal
1	107 DSR (const. ON)	→	Data set ready
2	108 DTR	←	Data terminal ready
3	109 DCD (const. ON)	→	Data channel re-ceived line signal detector
4	102 SG		Signal ground
5	103 TxD	←	Transmitted data
6	104 RxD	→	Received data
7	105 RTS (not in use)	←	Request to send
8	106 CTS (const. ON)	→	Clear to send

**Table 3-3** Command line interface pin-out numbering

Here is the pin out arrangement for the DB9 to RJ-45 Conversion:

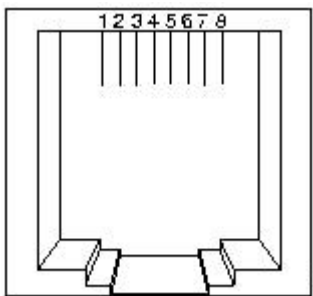

**RJ-45:**

6  
5  
3  
4

**DB9:**

2  
3  
4  
5